


INSTALLATION INSTRUCTIONS

PDU-FIU-8-BR2020



HARDWARE PROVIDED:

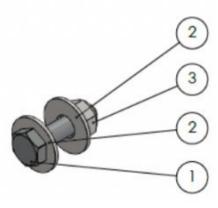

INSTALL INSTRUCTION	
	-

REVISION DATE	I-1	07/12/2017
	REVISION	DATE

PROPRIETARY AND CONFIDENTIAL


THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY
OF EZSTAK LLC ANY REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF EZSTAK LLC IS PROHIBITED.

SHEET 1 OF 6

INSTALL INSTRUCTIONS FOR PDU UNIT USING PDU-FIU-8-BR2020 BRACKETS



HARDWARE PROVIDED:

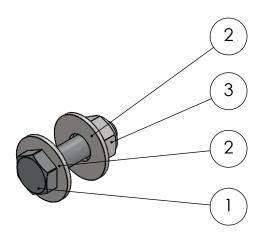

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	1051223	BOLT, HEX HEAD, 1/4"-20, 1" LONG, ZN PLACED, GRADE 5 CAP	4
2	1089578	WASHER - 0.25" (0.3125"ID - 0.75" OD)	8
3	1051225	Nut Nylon Lock [0.25]	4

INSTALL INSTRUCTION

REVISION	DATE
I-1	07/12/2017

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF EZSTAK LLC ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF EZSTAK LLC IS PROHIBITED.



STEP 1: REMOVE BOTH THE SECTIONS OF OEM TRUNK FLOOR BY REMOVING THE BOLTS AS SHOWN.



STEP 2: REMOVE THE FLOOR SURROUND SECTION AS SHOWN WHICH WILL EXPOSE THE CROSS BRACE UNDERNEATH IT.





NSTALL INSTRUCTION	REVISION	DATE
	I-1	07/12/20

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY
OF EZSTAK LLC ANY REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF EZSTAK LLC IS PROHIBITED.


SHEET 3 OF 6

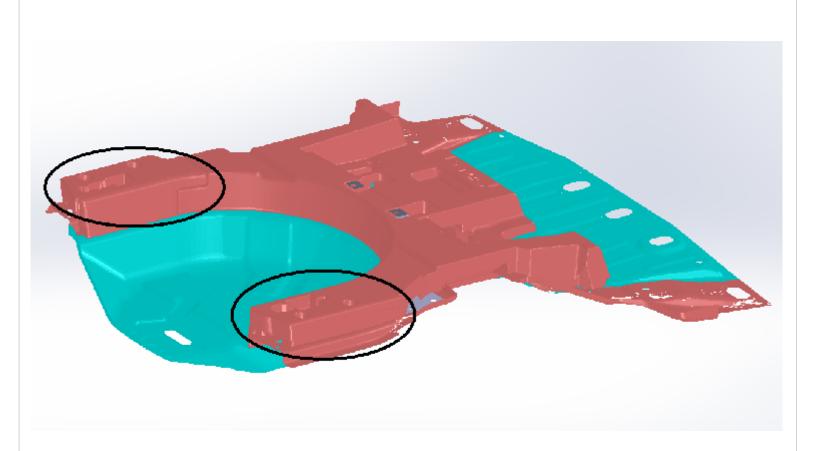

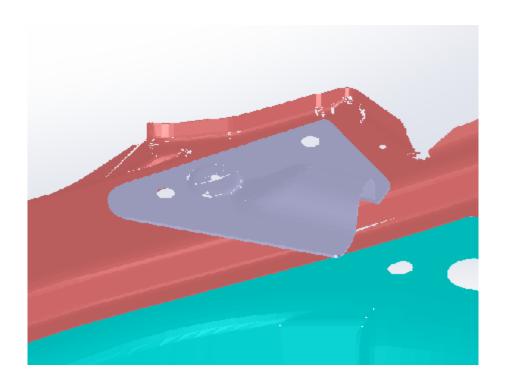

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY
OF EZSTAK LLC ANY REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF EZSTAK LLC IS PROHIBITED.

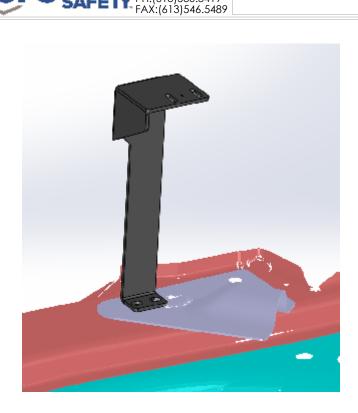


STEP 3:

INSTALL THE FRONT LEG BRACKETS ON BOTH SIDES USING THE OEM BOLT.

STEP 4:

PLACE THE PLASTIC COVERS BACK AND ALSO THE TRUNK FLOOR.

STEP 5: INSTALL THE REAR LOOP BRACKET AS SHOWN USING THE OEM BOLTS. (TRUNK FLOOR NOT SHOWN).

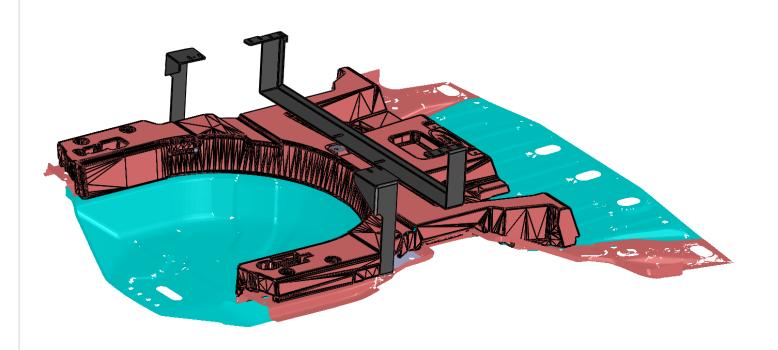

REVISION DATE

I-1 07/12/2017


THE INFORMATION CONTIDENTIAL
THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY
OF EZSTAK LLC ANY REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF EZSTAK LLC IS PROHIBITED.

SHEET 5 OF 6



ALIGNMENT OF REAR LOOP BRACKET AFTER PLACING BACK THE TRUNK FLOOR

STEP 6: REMOVE THE BOTTOM DRAWER BY OPENING IT TO FULL EXTENSION AND PUSHING THE PLASTIC TABS IN OPPOSITE DIRECTIONS LOCATED ON BOTH SIDES OF THE SLIDE WHILE PULLING THE DRAWER STRAIGHT OUT.

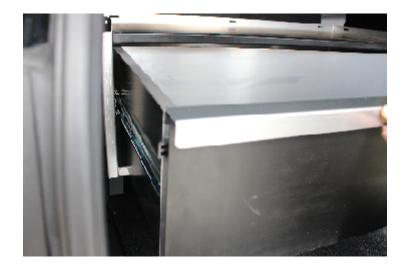




REVISION DATE

I-1 07/12/2017

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF EZSTAK LLC ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF EZSTAK LLC IS PROHIBITED.

STEP 7:

ALIGN THE SLOTS OF THE CABINET WITH THE SLOTS OF THE BRACKETS AND BOLT THE CABINET USING THE HARDWARE PROVIDED (1,2 AND 3).

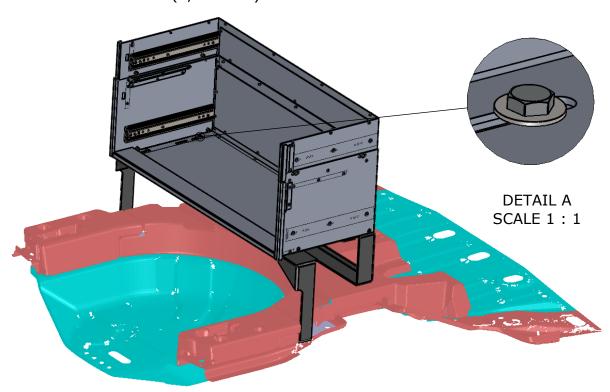

STEP 8:

PLACE THE DRAWER INTO CABINET BY ALIGNING THE SLIDES ON EACH SIDE AND PUSHING THE DRAWER STRAIGHT IN UNTIL FULLY CLOSED.

THE INSTALLATION IS NOW COMPLETE.

